


AZG-4

English

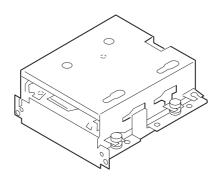

SERVICE MANUAL

MD MECHANISM

BASIC MD MECHANISM: KMS-260B

TYPE
Α
YA
В
YB





PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.



- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynling laserståling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyt-täjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

VARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvising, kan användaren utsättas för osynling laserstrålning, som överskrider gränsen för laserklass 1.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION


L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL!

Usynlig laserståling ved åbning, når sikkerhedsafbrydereer ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT label is located on the rear exterior.

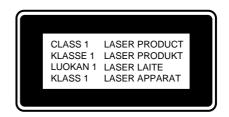


Precaution to replace Optical block (KMS-260B)

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

 After the connection, remove solder shown in the right figure.

MD PICKUP Assy P.C.B.

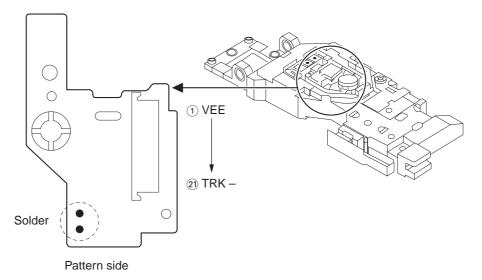

ELECTRICAL MAIN PARTS LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。 If can't understand for Description please kindly refer to "REFERENCE NAME LIST".


REF. NO	PART NO.	KANF NO.		REF. NO	PART NO.	KANRI NO.	DESCRIPTION
IC				C219	87-016-296-0	80 C-0	CAP,TN 22-4SV(A)
				C220	87-010-662-0		CAP,E 22-6.3
	87-A20-707-0		C-IC,CXA2523AR	C221	87-010-831-0		CAP,U,0.1-16F
	87-A20-708-0		C-IC,CXD2652AR	C222	87-016-444-0		CAP,TN 47-10 F95E
	87-A20-709-0		C-IC, BD7910FV	C223	87-010-831-0	80 C-0	CAP,U,0.1-16F
	8A-ZG4-601-0 87-A21-451-0		C-IC,CXP81952M-552R	a224	07 310 605 0	00 00	מאה כ 170 מאה מאה ב
	07-AZI-45I-U	40	C-IC,MSM51V4400D-70	C224 C225	87-A10-685-0 87-010-831-0		CAP,S 470P-100 J CH CAP,U,0.1-16F
	87-A20-755-0	80	C-IC,AK93C45AF	C226	87-010-831-0		CAP,U,0.1-16F
	87-A20-710-0		C-IC,S-8110AMP	C227	87-012-274-0		IP CAP,U 1000P-50B
	87-A20-711-0		C-IC,BA5970FP	C228	87-012-274-0		IP CAP,U 1000P-50B
	87-A21-110-0		C-IC, AK4519VF				
	87-017-853-0	40	IC,NJM2100V	C229	87-012-274-0		IP CAP,U 1000P-50B
				C232	87-012-274-0		IP CAP,U 1000P-50B
	87-A21-340-0	40	C-IC, LA5638H	C233	87-012-274-0		IP CAP,U 1000P-50B
				C236 C300	87-010-831-0 87-010-831-0		CAP,U,0.1-16F
TRANSISTO)R			C300	07-010-031-0	00 C-C	CAP,U,0.1-16F
IIIIIIIII	J10			C301	87-010-831-0	80 C-0	CAP,U,0.1-16F
	87-026-423-0	80	C-TR RN2305	C302	87-010-831-0		CAP,U,0.1-16F
	89-115-884-0		CHIP-TRANSISTER 2SA1588Y	C305	87-016-462-0		CAP,S 1-16 F
	89-341-164-0	80	CHIP-TRANSISTOR, 2SC4116 Y	C307	87-010-831-0	80 C-0	CAP,U,0.1-16F
	87-026-412-0	80	C-TR RN1305	C308	87-010-831-0	80 C-0	CAP,U,0.1-16F

DIODE				C311	87-010-662-0		CAP,E 22-6.3
DIODE				C312	87-012-195-0		CAP,U 100P-50CH
	87-001-166-0	0.0	DIODE,1SS301	C321 C322	87-012-274-0 87-012-274-0		IP CAP,U 1000P-50B IP CAP,U 1000P-50B
	87-A40-412-0		C-DIODE, SB05-05CP	C323	87-012-274-0		IP CAP,U 1000P-50B
	0, 1110 112 0		0 21022/8203 0301	0020	0, 012 2,1 0	00 011	21 0111 / 0 20001 002
				C324	87-012-274-0	80 CH	IP CAP,U 1000P-50B
MD C.B				C325	87-012-274-0		IP CAP,U 1000P-50B
				C400	87-010-831-0		CAP,U,0.1-16F
C100	87-016-296-0		C-CAP, TN 22-4SV(A)	C401	87-010-831-0		CAP,U,0.1-16F
C101	87-016-296-0		C-CAP, TN 22-4SV(A)	C402	87-010-831-0	80 C-C	CAP,U,0.1-16F
C102 C103	87-012-286-0 87-010-787-0		CAP, U 0.01-25 CAP, U 0.022-25	C403	87-010-831-0	80 C-C	CAP,U,0.1-16F
C103	87-010-767-0		C-CAP, E 22-6.3	C404	87-010-831-0		CAP,U,0.1-16F
0101	0, 010 001 0		0 0111 / 2 22 0.0	C405	87-010-661-0		CAP,E 10-16
C105	87-010-831-0	80	C-CAP, U, 0.1-16F	C406	87-010-779-0		CAP,E 100-6.3
C106	87-016-462-0		C-CAP,S 1-16 F	C407	87-012-197-0	80 C-0	CAP,U 150P-50 CH
C107	87-012-195-0		C-CAP,U 100P-50CH				
C108	87-012-274-0		CHIP CAP,U 1000P-50B	C408	87-012-197-0		CAP,U 150P-50 CH
C109	87-A11-033-0	80	C-CAP,TN 47U-4	C411	87-012-271-0		P, U 560P-50
0111	07 016 006 0	0.0	G GAD TIME OO AGEE(A)	C412	87-012-271-0		P, U 560P-50
C111 C112	87-016-296-0 87-012-286-0		C-CAP, TN 22-4SV(A) CAP, U 0.01-25	C413 C414	87-012-197-0 87-012-197-0		CAP,U 150P-50 CH CAP,U 150P-50 CH
C112	87-012-284-0		CAP, U 6800P-50	CTIT	07-012-177-0	00 0-0	CAF, 0 IJUF JU CII
C114	87-010-828-0		CHIP CAPACITOR,U 0.033-25F	C415	87-012-286-0	80 CAI	P, U 0.01-25
C115	87-A10-369-0		C-CAP,S 0.47-16 K B	C416	87-012-286-0		P, U 0.01-25
				C417	87-012-268-0		CAP,U 330P-50 B
C116	87-012-282-0	80	CAP, U 4700P-50	C418	87-012-268-0		CAP,U 330P-50 B
C117	87-016-462-0		C-CAP,S 1-16 F	C423	87-012-286-0	80 CAI	P, U 0.01-25
C118	87-012-282-0		CAP, U 4700P-50				
C119	87-016-491-0		C-CAP,S 0.22-16 FZ	C424	87-012-286-0		P, U 0.01-25
C120	87-010-787-0	80	CAP, U 0.022-25	C429 C430	87-012-286-0 87-012-286-0		P, U 0.01-25
C121	87-012-286-0	80	CAP, U 0.01-25	C431	87-012-286-0		P, U 0.01-25 CAP,E 100-6.3
C122	87-010-829-0		CAP, U 0.047-16	C431	87-010-779-0		CAP,E 100-6.3
C123	87-012-286-0		CAP, U 0.01-25	0131	07 010 775 0	00 0 0	CIII / L 100 0.5
C124	87-010-662-0		C-CAP, E 22-6.3	C434	87-010-831-0	80 C-0	CAP,U,0.1-16F
C125	87-010-662-0		C-CAP,E 22-6.3	C501	87-010-831-0		CAP,U,0.1-16F
				C502	87-010-831-0		CAP,U,0.1-16F
C126	87-010-831-0		C-CAP,U,0.1-16F	C503	87-010-662-0		CAP,E 22-6.3
C201	87-010-831-0		C-CAP, U, 0.1-16F	C504	87-010-831-0	80 C-0	CAP,U,0.1-16F
C202	87-010-831-0		C-CAP, U, 0.1-16F	QE 0.5	07 010 660 0	00 ~	ανη π αο <i>c</i> α
C203	87-010-785-0		C-CAP, U0.015-25BK	C505	87-010-662-0		CAP,E 22-6.3
C204	87-016-461-0	OU	C-CAP,S 0.47-16F	C506 C507	87-010-831-0 87-010-661-0		CAP,U,0.1-16F CAP,E 10-16
C205	87-010-831-0	80	C-CAP,U,0.1-16F	C508	87-010-831-0		CAP,U,0.1-16F
C206	87-012-270-0		CAP, U 470P-50	C509	87-010-662-0		CAP,E 22-6.3
C207	87-016-461-0		C-CAP,S 0.47-16F		0	- `	
C208	87-012-286-0		CAP, U 0.01-25	C510	87-010-831-0		CAP,U,0.1-16F
C209	87-010-831-0	80	C-CAP,U,0.1-16F	C511	87-010-661-0		CAP,E 10-16
	0= 6== : :			C513	87-010-661-0		CAP,E 10-16
C210	87-012-172-0		CAPACITOR CHIP U 10P CH	C514	87-010-661-0		CAP,E 10-16
C211	87-012-172-0		CAPACITOR CHIP U 10P CH	C515	87-012-337-0	80 C-(CAP,U 56P-50 CH
C212 C213	87-012-195-0 87-010-662-0		C-CAP,U 100P-50CH C-CAP,E 22-6.3	C516	87-012-337-0	80 C.	CAP,U 56P-50 CH
C213 C214	87-010-662-0		C-CAP,E 22-6.3 CHIP CAP,U 1000P-50B	C516 C517	87-012-337-0 87-012-278-0		CAP,U 56P-50 CH CAP,U 2200P-50 B
C217	01-012-214-0	UU	CHIL CAF,U IUUUF-3UB	C517	87-012-278-0		CAP,U 2200P-50 B
C217	87-012-188-0	80	C-CAP,U 47P-50 CH	C510	87-012-276-0		CAP,U,0.1-16F
C218	87-012-172-0		CAPACITOR CHIP U 10P CH	C520	87-010-661-0		CAP,E 10-16
							•

REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	KAN NO	
C521 C522 C523 C524 C525	87-010-831-08 87-010-661-08 87-010-662-08 87-010-662-08 87-012-274-08	0 C-CAP, 0 C-CAP, 0 C-CAP,	U,0.1-16F E 10-16 E 22-6.3 E 22-6.3 AP,U 1000P-50B	L616 R423 R424 R425 R426	87-A50-163-08 87-025-564-08 87-025-564-08 87-022-583-08 87-022-583-08	0 0 0	C-COIL,ZBFS5101-PT C-RES,U M/F 47K D C-RES,U M/F 47K D C-RES,U M/F 12K D C-RES,U M/F 12K D
C526 C527 C528 C530 C531	87-012-274-08 87-010-661-08 87-010-661-08 87-010-831-08 87-010-831-08	0 C-CAP, 0 C-CAP, 0 C-CAP,	AP,U 1000P-50B E 10-16 E 10-16 U,0.1-16F U,0.1-16F	X200 X301 MECHA C.E	87-A70-105-08 87-A70-100-08		C-VIB,XTAL 22.5792MHZ SMD-49 C-VIB,CER 12.0MHZ PBRC-BR-A
C600 C601 C602 C603 C604	87-010-662-08 87-010-779-08 87-010-779-08 87-010-662-08 87-010-779-08	0 C-CAP, 0 C-CAP, 0 C-CAP,	E 22-6.3 E 100-6.3 E 100-6.3 E 22-6.3 E 100-6.3	CON1 M400 M401 SW1 SW2	87-A61-058-08 87-A91-490-01 87-A91-489-01 87-A91-419-08 87-A91-445-08	0 0 0	C-CONN,8P H 6232BOT MOT,BCD3B04 MOT,BCD3B93 C-SW,PUSH MPU11121MLB1 C-SW,PUSH MPU20420MLB1
C607 C608 CN100 CN201 CN300	87-010-831-08 87-010-831-08 87-A60-537-08 87-A60-467-08 87-A60-518-08	0 C-CAP, 0 C-CONN 0 C-CONN	U,0.1-16F U,0.1-16F ,21P H CFP55 ,4P V FMN-BMTR ,8P H 6232	LOAD C.B CON451 M450 SW451	86-NFZ-675-01 87-A90-672-01 87-A90-673-01	0	CONN,5P H 6216-11H MOT,M25E-4 SW,MICRO ESE11SH1C
CN400 CN401 CN600 FB501 L100	87-A60-027-08 87-A60-062-01 87-A60-519-08 87-A90-828-08 87-A50-117-08	0 CONN, 0 0 C-CONN 0 C-F-BE	,8P H WHT 5P V 9604S-05C ,14P H 6232 AD, BK1608LM182 ,10UHLQH3C	SW452	87-A90-117-01		SW, PUSH 1-1-1 MPU103
L101 L102 L103 L201 L202	87-A50-012-08 87-A50-117-08 87-A50-117-08 87-A50-117-08 87-A50-117-08	0 C-COIL 0 C-COIL	,100UH LQH3C ,10UHLQH3C ,10UHLQH3C ,10UHLQH3C ,10UHLQH3C				
L203 L301 L501 L502 L503 L504 L505	87-A50-116-08 87-A50-117-08 87-A50-116-08 87-A50-116-08 87-A50-116-08 87-005-774-08 87-005-774-08	0 C-COIL 0 C-COIL 0 C-COIL					
L611 L612 L613 L614 L615	87-A50-163-08 87-005-512-08 87-005-512-08 87-A50-163-08 87-A90-034-08	0 C-COIL 0 C-COIL	,ZBFS5101-PT ,BLM21A05 ,BLM21A05 ,ZBFS5101-PT ,EMI BLM41P750				

Regarding connectors, they are not stocked as they are not the initial order items.
 The connectors are available after they are supplied from connector manufacturers upon the order is received.

〇チップ抵抗部品コード/CHIP RESISTOR PART CODE

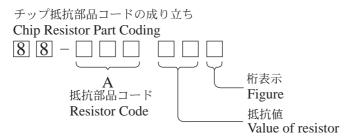

チップ抵抗 Chip resistor


容量	種類	許容誤差	記号	寸法/Dime	ensions ((mm)		抵抗コード : A
Wattage	Type	Tolerance	Symbol	外形/Form	L	W	t	Resistor Code : A
1/16W	1005	± 5%	CJ		1.0	0.5	0.35	104
1/16W	1608	± 5%	CJ	L J t	1.6	0.8	0.45	108
1/10W	2125	± 5%	CJ		2	1.25	0.45	118
1/8W	3216	± 5%	CJ	۴	3.2	1.6	0.55	128

TRANSISTOR ILLUSTRATION




2SA1588 2SC4116 RN1305 RN2305


IC BLOCK DIAGRAM IC, BD7910FV

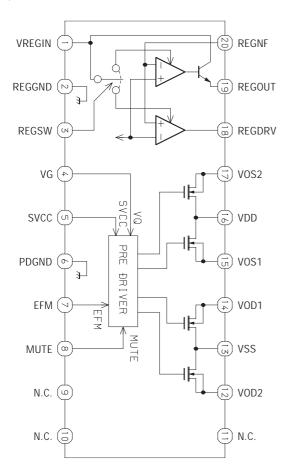


IC, LA5638H

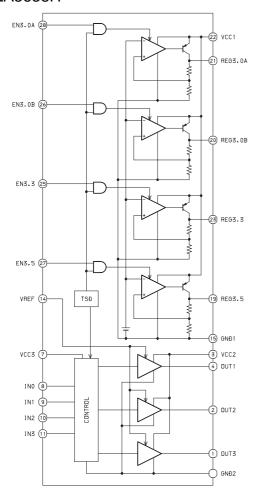



IC, BA5970FP

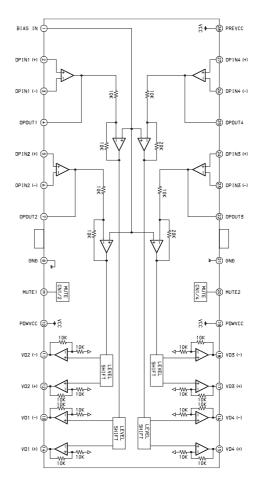



IC, AK4519VF

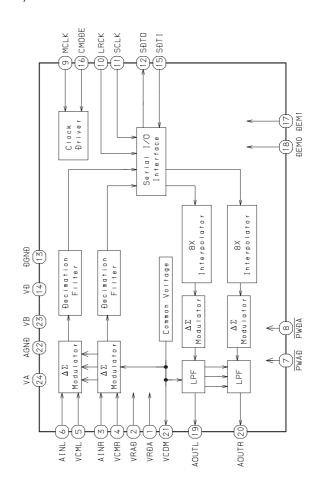

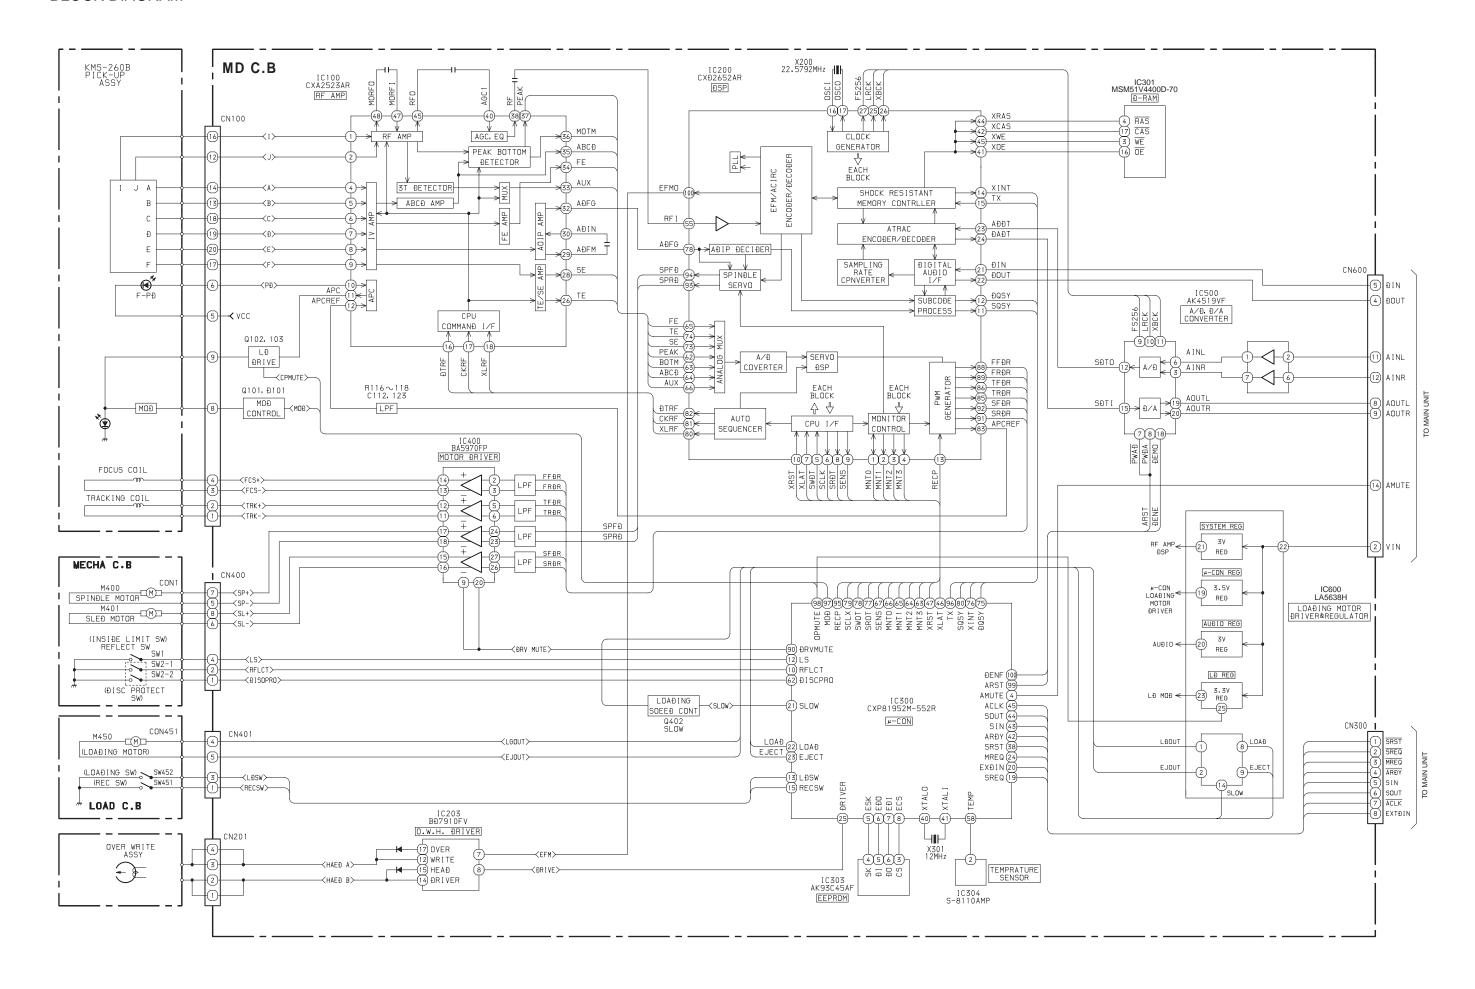


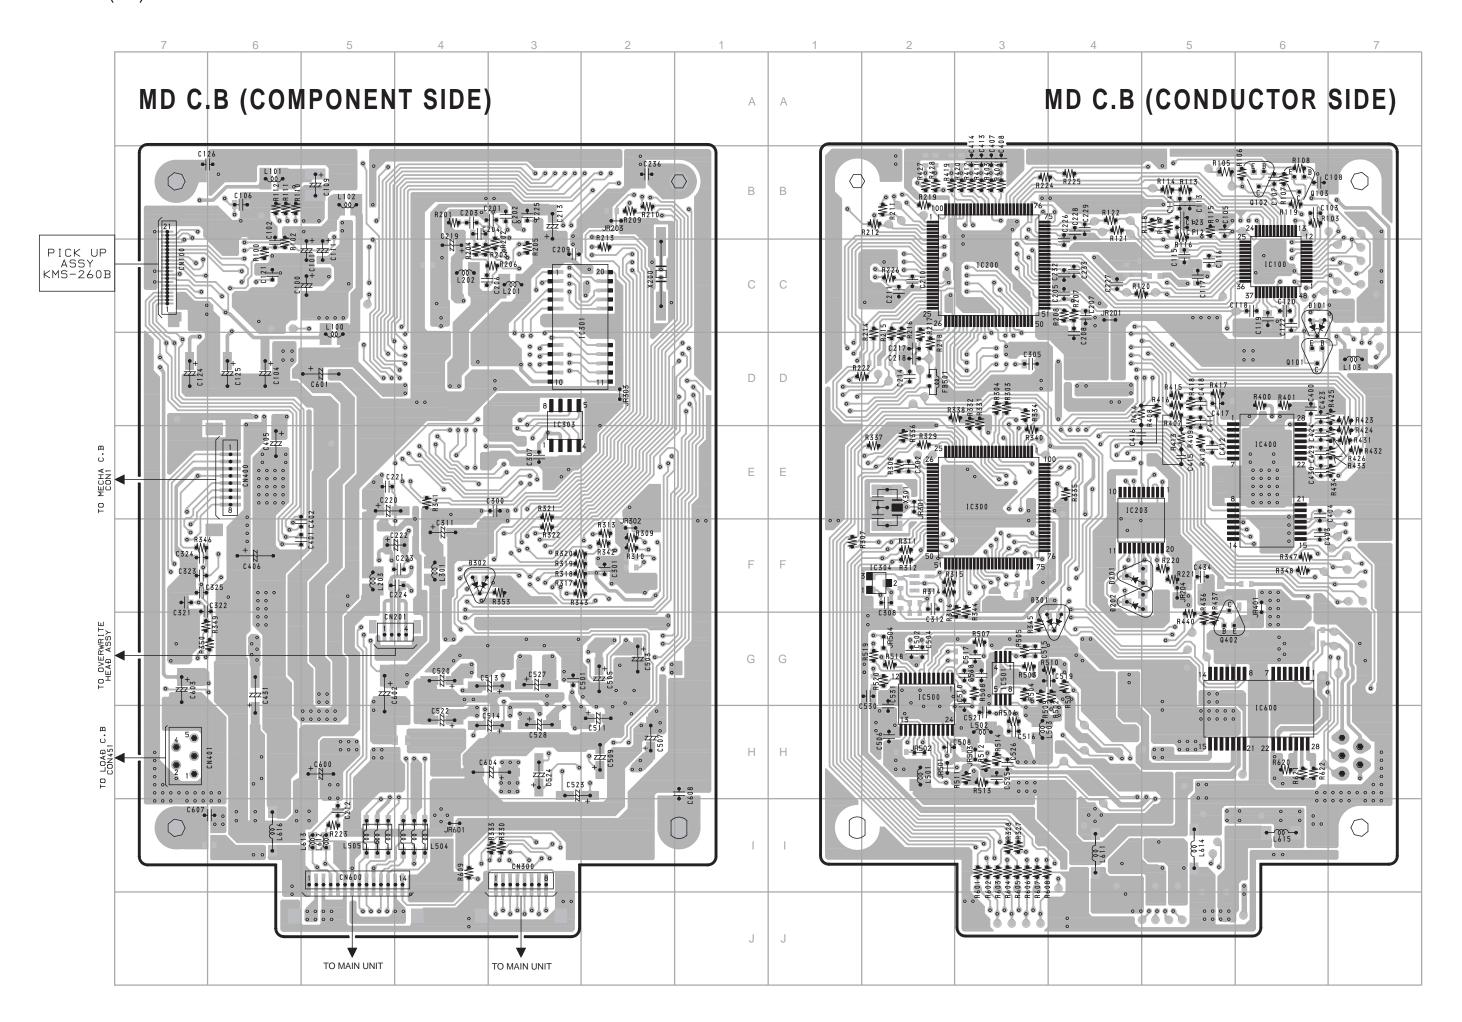


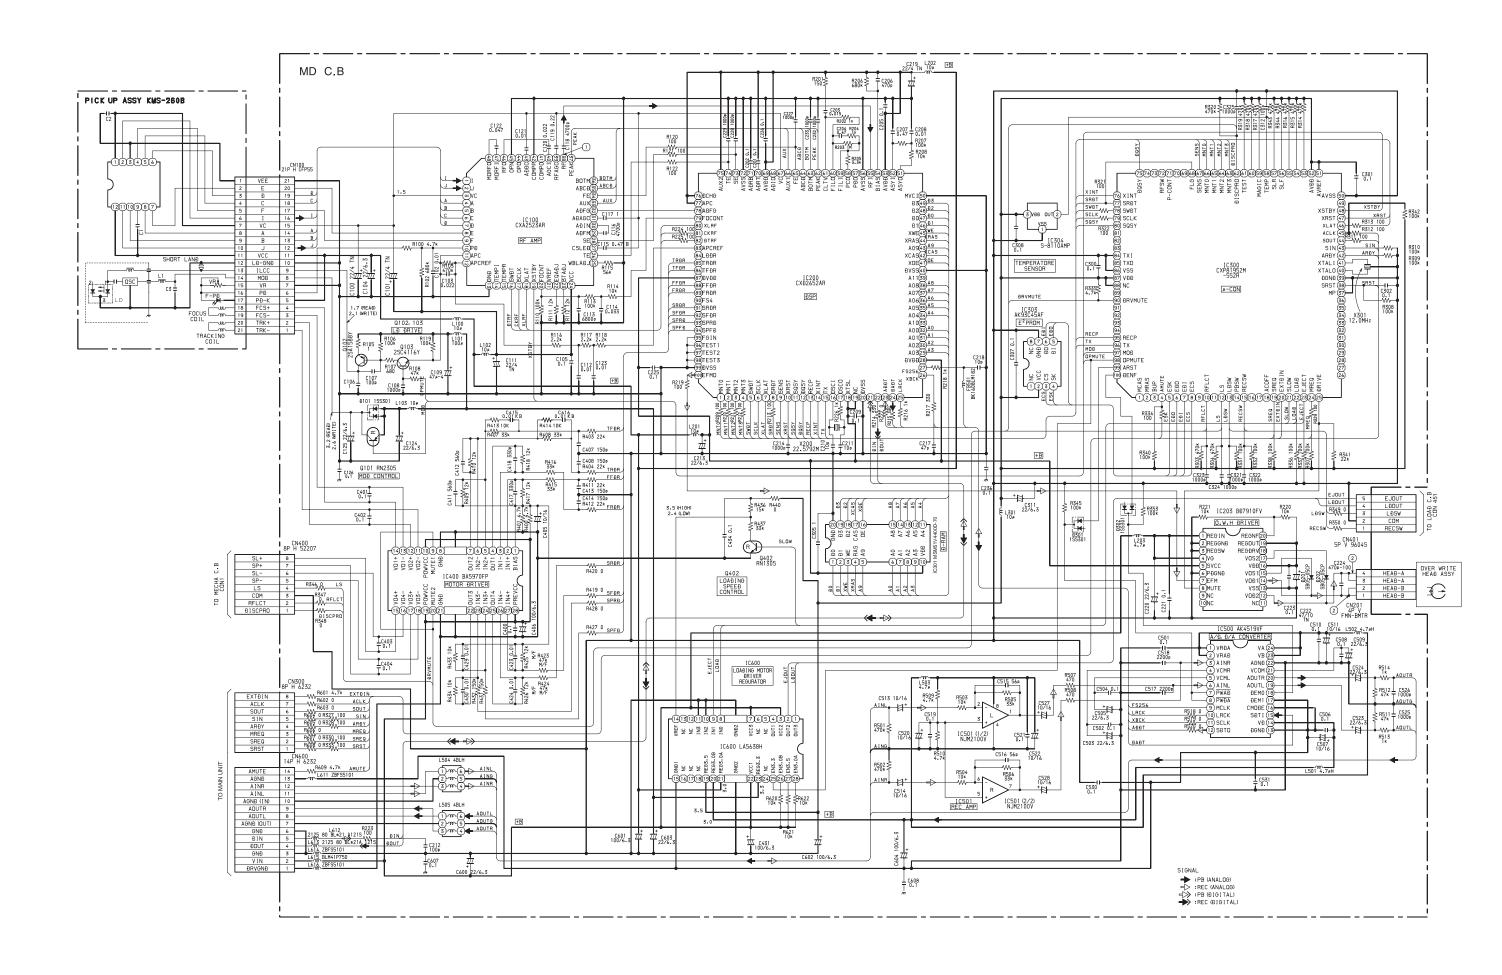


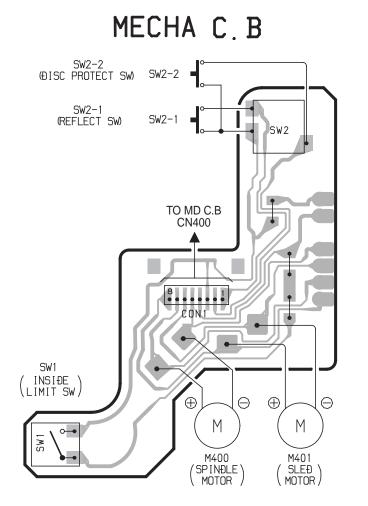

5 | 6 |

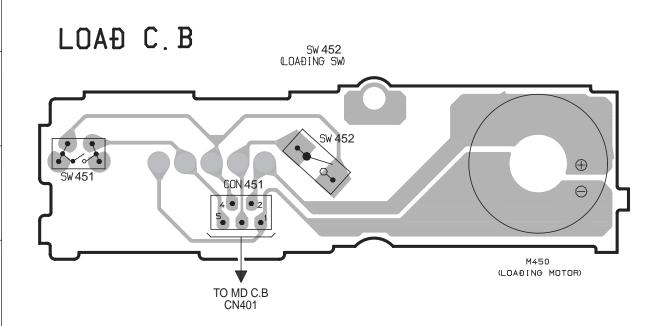

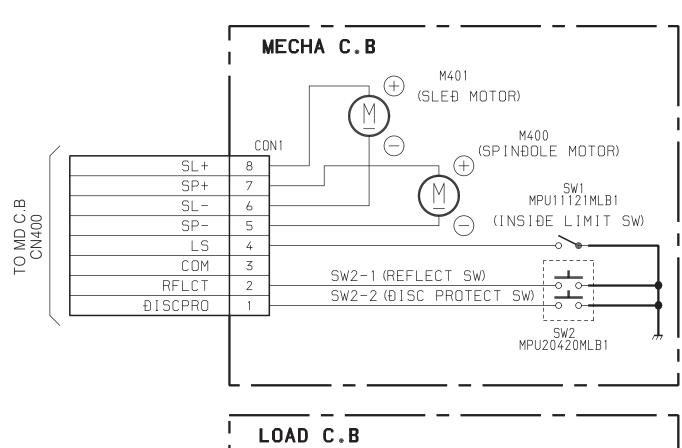


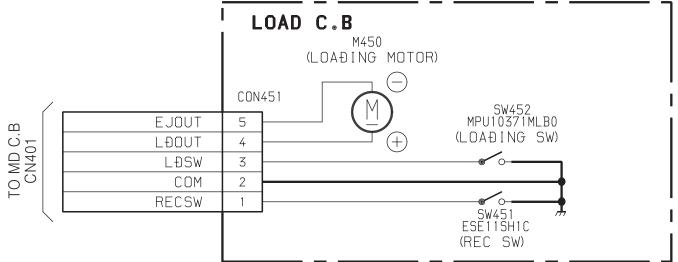


WAVE FORM

1 IC100 Pin 38 (RF)

VOLT/DIV: 0.5V TIME/DIV: 1mS

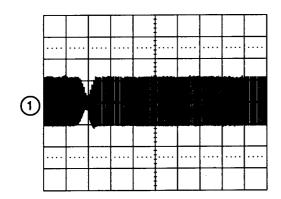

2 CN201 Pin ① (HEAD-B) VOLT/DIV: 10V CN201 Pin ④ (HEAD-A) TIME/DIV: 0.2μS

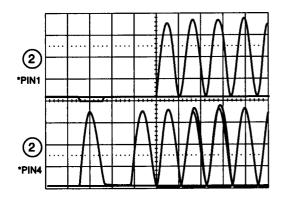

TEST MODE

1. Starting up the MD Test Mode

While pressing the MD function button, insert the AC plug into the outlet.

Notes: 1) Mechanical abnormalities are ignored while the test mode is starting up. If any abnormality occurs, disconnect the plug immediately.

2) During test mode operation, playback and recording are normally not possible.

2. Checking the MD Test Mode

Indication

About five seconds later after the test mode starts, characters as shown in the below figure appear on the screen and the test mode becomes usable.



3. Canceling the MD Test Mode

- 1) Press the MD EJECT button to eject the disk.
- 2) Disconnect the AC plug.
- * If the MD test mode is canceled by procedures other than the above, the unit sometimes run incorrectly. If this happens, disconnect the AC plug.

4. Switching to the Servo Standby Mode

After starting up the test mode, press the STOP key to switch to the servo standby mode. (Indication: ALL SV OFF) Change from this mode to each mode.

When the STOP key is pressed in each mode, the display returns to "ALL SV OFF".



5. Notes during Test Mode Operation

If the test mode starts up, the touch sensor of the operation panel does not run.

Operate in the following ways.


- 1) Use the remote controller.
- 2) Rotate the pulley that is visible from the hole of the CD board by hand to rotate the operation panel.

Checking the Sled Feed Operation

- Press the F.SKIP button in the "ALL SV OFF" state to move the lens and pickup to the outer circumference. Then "T.SLED FWD" is displayed.
- 2) Press the B.SKIP button in the "ALL SV OFF" state to move the lens and pickup to the inner circumference. Then "T.SLED RVS" is displayed. Set the INSIDE LIMIT switch to ON to light the frame of graphic equalizer "JAZZ" of the display.

7. Checking the Laser Power

- 1) Every time the MD EDIT button is pressed in the "ALL SV OFF" state, the display is switched as shown below.
- 2) After checking, press the STOP button to return the display to "ALL SV OFF".

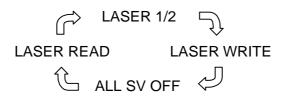

8. Checking the Loading Mechanism and OWH

to check the operations of the loading mechanism and OWH, follow the procedure given below.

Every time the CD → MD REC button or MD EJECT button is pressed in the "ALL SV OFF" state, the OWH moves up or down.


CD → MD REC button OWH DOWN

MD EJECT OWH UP/Unloading

About Indication

The state of circuit, selected disk or switch can be checked on the display.

	Function	Indication	pict indication	When pict lights	When pict glights off	
1	Laser power	er LA READ-1/2-WRITET T-BA		Displayed using the three-step level meter		
2	Disk type	SELECT GRV	TIME MARK	MO disk (for recording and playback)		
		SELSCT PIT	AUTO MARK	PIT disk (for playback)	disk (for playback)	
3	REC PROTECT SW		ROCK frame	REC is possible.	REC protection	
4	REFLECT SW	_	POP frame	PIT disk	MO disc	
5	INSIDE LIMIT SW	_	JAZZ frame	Switch ON (innermost circumference)	Switch OFF	

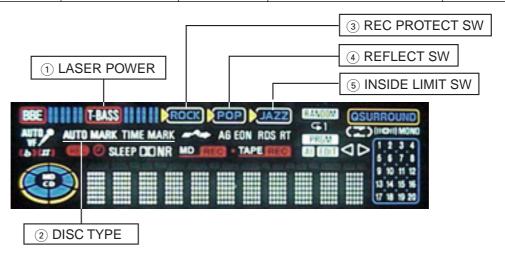

10. Checking the Servo Operation

10-1. Checking the Focus Search and Spindle Kick 1 (checking the S-curve)

- When the RANDOM/REPEAT button of the remote controller is pressed in the "ALL SV OFF" state, the focus search operation
 and spindle kick are performed at the same time. Then "FOCUS CHECK" is displayed.
 These operations are repeated regardless of whether a disk is installed. Therefore, the S-curve can be checked with the disk
 installed.
- 2) After checking, press the STOP button to return the display to "ALL SV OFF".

10-2. Checking the Focus Search and Spindle Kick 2

- 1) When the PLAY button is pressed in the "ALL SV OFF" state without any disk, the search operation and spindle kick are performed at the same time. Then "FOCUS SRCH" is displayed.
- 2) After checking, press the STOP button to return the display to "ALL SV OFF".

10-3. Checking the Focus Servo

- 1) Insert a disk
- 2) Press the MD MODE button and set the servo mode according to the inserted disk as shown below.
- MO disk: "SELECT GRV" appears and "TIMEMARK" lights.
- PIT disk: "SELECT PIT" appears and "AUTOMARK" lights.
- 3) Press the PLAY button.
 - If the focus servo is normal, "FOCUS SRCH" appears and "FOCUS ON!" appears.
- 4) After checking, press the STOP button to return the display to "ALL SV OFF".

10-4. Checking the All Servo ON

- 1) When the ENTER button is pressed during focus servo off, the tracking sled servo is turned on and all servos run. If the servos are all normal, "ALL SV ON" is displayed.
- 2) After checking, press the STOP button to return the display to "ALL SV OFF".

ELECTRIC ADJUSTMENT

All the MD blocks are adjusted and checked in the test mode.

If "No Adjust" is displayed, perform the adjustments of 1 to 3.

1. Temperature Compensation Adjustment

- * Normally, do not perform the temperature compensation adjustment.
 - If the adjustment value is extensively different, perform the adjustment as given below in a suitable environment for measuring the correct temperature near the unit.
- Test point: Check the test point on the display.
- Tool: Thermometer
- 1) After the MD test mode starts up, press the STOP button to display "ALL SV OFF".
- 2) Press the DISPLAY button to display "TEMP = \$**".
- 3) Press the PAUSE button to display "T + **C: +00".
- 4) Put the thermometer near the MD mechanism to measure the room temperature.
- 5) Check the value of the thermometer and press the B.SKIP button and F.SKIP button to adjust until the value is the same as ** on the display. Then press the ENTER button to store the value.
- 6) After adjustment, press the STOP button to return the display to "ALL SV OFF". If "No Adjust" appears, perform 1) to 3) and press the ENTER button without changing the adjustment value with the B/F.SKIP buttons.

2. Laser Power Adjustment

- Test point: Check the test point on the display./Pickup laser output
- Tool: Laser power meter (meters that can measure up to 10 mW)

2-1. Playback Laser Power Adjustment

- 1) Press the MD EDIT button in the "ALL SV OFF" state to change the display to "LASER READ".
- 2) Press the PAUSE button once to display "LASER = \$**".
- 3) Set it to "LASER = \$11" using the B.SKIP and F.SKIP buttons, and press the ENTER button.
- 4) Measure the pickup laser output using the laser power meter and adjust it using the B.SKIP button and F.SKIP button so that it is around 0.68 mW.
- 5) After adjustment, press the STOP button to change the display to "ALL SV OFF".

2-2. Recording Laser Power Adjustment

- 1) Press the MD EDIT button three times in the "ALL SV OFF" state to change the display to "LASER WRITE".
- 2) Press the PAUSE button once to display "LASER = \$**".
- 3) Set it to "LASER = \$9F" using the B.SKIP and F.SKIP buttons, and press the ENTER button.
- 4) Measure the pickup laser output using the laser power meter and adjust it so that it is around 0.68 mW.
- 5) After adjustment, press the STOP button to change the display to "ALL SV OFF".

Note: If the laser output exceeds 7.0 mW, the pickup may be damaged.

3. Automatic Sequence Adjustment (EFB/IVR/FOCUS AGC/TRACKING AGC adjustment)

- Test point: Check the test point on the display.
- Test disk: MDW-74, TGYS-1 or equivalent

3-1. Adjusting the MO Disk

- 1) Load the MDW-74.
- 2) Press the MD MODE button to display "SELECT GRV".
- Press the MD function button to display "AUTO ADJ". After adjustment, "DONE" is displayed. (If the adjustment failed, "FAILED" appears.)
- 4) Then, press the STOP button to return the display to "ALL SV OFF".

3-2. IVR, EFB, Focus/ Tracking/ Sled Gain Check of MO Disk

- 1) Move the pickup to the center of the disk using the B.SKIP button and F.SKIP button.
- 2) Press the PLAY button to display "FOCUS ON!".
- 3) Press the ENTER button to display "ALL SV ON".
- 4) Press the STOP button and press the DISPLAY button twice.

Confirm that the values of "IV\$**:EF\$♦♦" are within the range shown below. (hexadecimal)

IV\$ "**" 03 to 07 EF\$ "\$\display" 09 to 12



Press the DISPLAY once again.

Confirm that the values of "Gf**t##s△△" are within the range shown below. (hexadecimal)

f "**"	20 to 40
t "##"	15 to 35
s "\(\triangle\)"	15 to 35



6) After adjustment, press the STOP button to return the display to "ALL SV OFF".

3-3. Adjusting the PIT Disk

- 1) Load the TGYS-1.
- 2) Press the MD MODE button to display "SELECT PIT".
- Press the MD function button to display "AUTO ADJ". After adjustment, "DONE" is displayed. (If the adjustment failed, "FAILED" appears.)
- 4) Then, press the STOP button to return the display to "ALL SV OFF".

3-4. IVR, EFB, Focus/ Tracking/ Sled Gain Check of PIT Disk

- 1) Move the pickup to the center of the disk using the B.SKIP button and F.SKIP button.
- 2) Press the PLAY button to display "FOCUS ON!".
- 3) Press the ENTER button to display "ALL SV ON".
- 4) Press the STOP button and press the DISPLAY button twice.

Confirm that the values of "IV\$**:EF\$\$\phi\$" are within the range shown below. (hexadecimal)

```
IV$ "**" ..... 13 to 19
EF$ "��" ..... 09 to 12
```



5) Press the DISPLAY once again.

Confirm that the values of "Gf**t##s△△" are within the range shown below. (hexadecimal)

```
f "**" ..... 2A to 45
t "##" ...... 15 to 40
s "\( \Delta \Delta \)" ...... 15 to 40
```



6) After adjustment, press the STOP button to return the display to "ALL SV OFF".

4. Playback Error Rate Check (PIT disk)

- Test point: Check the test point on the display.
- Test disk: TSYS-1 or equivalent
- 1) Load the TGYS-1.
- 2) Move the pickup to the center of the disk using the B.SKIP button and F.SKIP button.
- 3) Press the MD MODE button to display "SELECT PIT".
- 4) Press the PLAY button to display "FOCUS ON!".
- 5) Press the ENTER button to display "ALL SV ON".
- 6) Press the DISPLAY button once to confirm that the address indication is stable and count starts.
- 7) Press the DISPLAY button once again to display the playback error rate. Confirm that the numbers of "Er***: ***** " (underlined portion) is "Er0030" or lower.
- After checking, press the STOP button to return the display to "ALL SV OFF".

Record/Playback Error Rate Check (MO disk)

- Test point: Check the test point on the display.
- Test disk: MDW-74
- 1) Load the MDW-74.
- 2) Move the pickup to the center of the disk using the B.SKIP button and F.SKIP button.
- 3) Press the CD function button. Recording starts automatically in cluster 600.
- 4) After recording for about 15 seconds, press the STOP button.
- 5) Press the AUX/D-IN function button to move the pickup to around 600 cluster and enter the "ALL SV ON" state (the display is in the sate of the address indication), and press the DISPLAY button in or after cluster 600.
 - Then confirm that the values of "Er***: ****" (underlined portion) is "Er0030" or lower.
- After adjustment, press the STOP button to return the display to "ALL SV OFF".

5. UTCO (User TOC) Deleting Procedure

If "UTCO ERROR" or other message is displayed when inserting recorded disk and the UTCO needs to be deleted, follow this procedure.

- 1) Insert the disk whose UTOC is to be deleted.
- 2) Use the B.SKIP button and F.SKIP button to move the pickup to the center of the disk.
- 3) Press the MD MODE button to display "SELECT GRV".
- 4) Press the MD REC button to display "REC Analog"
- 5) Press the PLAY button to display "FOCUS ON!".
- 6) Press the ENTER button to display "ALL SV ON".
- 7) Press the TAPE REC/REC MUTE button to display "UTOC ERASE".
- 8) After deleting the UTOC, the display automatically returns to "ALL SV OFF".

7. Initializing Procedure of EEP-ROM

Follow the procedure given below to set the adjustment value of EEP-ROM to the default value (reference value).

- 1) While pressing the CD OPEN/CLOSE button, press the MD EDIT button of the unit.
- 2) After turning on the power again, confirm that "NO Adjust" is displayed.
- * Even in the "NO Adjust" state, the MD can be operated.



IC DESCRIPTION IC, CXA2523AR

Pin No.	Pin Name	I/O	Description
1	I	I	Input "I" RF signal converted to I-V.
2	J	I	Input "J" RF signal converted to I-V.
3	VC	О	Output voltage for VCC/2.
4	A	I	Input current for main beam servo signal A.
5	В	I	Input current for main beam servo signal B.
6	С	I	Input currentt for main beam servo signal C.
7	D	I	Input current for main beam servo signal D.
8	Е	I	Input current for side beam servo signal E.
9	F	I	Input current for side beam servo signal F.
10	PD	I	Input beam spectrum monitor signal.
11	APC	О	Output laser APC.
12	APCREF	I	Input reference voltage for laser power setting.
13	GND	_	GND.
14	TEMPI	I	N-+
15	TEMPR	I	Not used.
16	SWDT	I	Input micro-processor serial interface data.
17	SCLK	I	Input micro-processor serial interface shift clock.
18	XLAT	I	Input micro-processor serial interface latch. "L": Latch.
19	XSTBY	I	Standby setting pin. "H": Normal mode, "L": Standby.
20	FOCNT	I	Internal current setting pin.
21	VREF	О	Not used.
22	EQADJ	I/O	EQ central frequency setting pin.
23	3TADJ	I/O	BPF3T central frequency setting pin.
24	VCC	_	Power supply pin.
25	WBLADJ	I/O	BPF22 central frequency setting pin.
26	TE	О	Output tracking error signal.
27	CSLED	_	LPF capacitor connection pin for SLED error signal.
28	SE	О	Output SLED error signal.
29	ADFM	О	Output ADIP FM signal.
30	ADIN	I	Input ADIP signal comparator.
31	ADAGC	_	ADIPAGC capacitor connection pin.
32	ADFG	О	Output ADIP2 binary data signal.
33	AUX	О	I3 output temperature signal. Switched by serial command.
34	FE	О	Output focus error signal.
35	ABCD	О	Output beam spectrum signal for main beam servo detector.
36	ВОТМ	О	Output bottom hold signal for RF/ABCD.
37	PEAK	О	Output peak hold signal for RF/ABCD.
38	RF	О	RF equalizer output pin.
39	RFAGC	_	RFAGC capacitor connection pin.
40	AGCI	I	RFAGC input pin.
41	СОМРО	О	Not used.

Pin No.	Pin Name	I/O	Description
42	COMPP	I	User comparator non-inverted input pin.
43	ADDC	I/O	Capacitor connection pin for ADIP amplifier on return circuit.
44	OPO	О	Not used.
45	OPN	I	Non-inverted input pin for user operational amplifier.
46	RFO	О	RF amplifier output pin. Check point for eye pattern.
47	MORFI	I	Input pin where Groove RF signal is AC coupled.
48	MORFO	О	Output pin for Groove RF signal.

IC, CXD2652AR

Pin No.	Pin Name	I/O	Description
1	MNT0	О	
2	MNT1	О	Monitor output terminal.
3	MNT2	О	Monitor output terminar.
4	MNT3	О	
5	SWDT	I	Microprocessor serial interface data input.
6	SCLK	I	Microprocessor serial interface shift clock input.
7	XLAT	I	Microprocessor serial interface latch input. Latched at falling down edge.
8	SRDT	О	Microprocessor serial interface data output.
9	SENS	О	The terminal which outputs internal status in accordance with the address of the microprocessor serial interface.
10	XRST	I	Reset input. L: reset.
11	SQSY	О	Disc sub code Q sync/ADIP sync output.
12	DQSY	О	Subcode Q sync output of U-bit CD or MD format when the DIGITAL IN source is CD or MD.
13	RECP	I	Laser power selection input. H: Recording power, L: Playback power.
14	XINT	О	Interrupt request output terminal. L is output when interrupt status is generated.
15	TX	I	Record data output enable signal input terminal. H: enable.
16	OSCI	I	Crystal oscillator circuit input terminal.
17	OSCO	О	Crystal oscillator circuit output terminal. (Inverted output of OSCI).
18	XTSL	I	OSCI terminal input frequency selection. H: 512 Fs (22.5792 MHz), L: 1024 Fs (45.1584 MHz).
19	NC	_	Not connected.
20	DVSS	<u> </u>	Digital GND.
21	DIN	I	Digital audio interface signal input.
22	DOUT	О	Digital audio interface signal output.
23	ADDT	I	Analog recording signal input terminal. (External A/D converter output is connected to this terminal).
24	DADT	О	RECORD monitor output/decode audio data output.
25	LRCK	О	LRCK (44.1 kHz) output terminal to external audio block.
26	XBCK	О	Bit clock output (2.8224 kHz) output terminal to external audio block.
27	FS256	О	256 Fs output. (11.2896 MHz).
28	DVDD		Digital power supply.
29	A03	О	
30	A02	О	Address output to external DRAM.
31	A01	О	1.22.255 output to output to fitte inte
32	A00	О	
33	A10	О	Not used.
34	A04	О	
35	A05	О	Address output to external DRAM.
36	A06	О	1.22.255 output to output to fitte inte
37	A07	О	

Pin No.	Pin Name	I/O	Description
38	A08	0	Address output to external DRAM.
39	A11	О	Not used.
40	DVSS	_	Digital GND.
41	XOE	О	External DRAM output enable.
42	XCAS	О	CAS output to external DRAM.
43	A09	О	Address output to external DRAM.
44	XRAS	О	RAS output to external DRAM.
45	XWE	О	Write enable for external DRAM.
46	D1	I/O	
47	D0	I/O	Data bus for external DRAM.
48	D2	I/O	Data ous foi external DRAM.
49	D3	I/O	
50	MVCI	I	External VCO (784 fs) clock input.
51	ASYO	О	Playback EFM full swing output. (L: VSS, H: VDD).
52	ASYI	I	Playback EFM comparator slice voltage input.
53	AVDD		Analog GND.
54	BIAS	I	Playback EFM comparator bias current input.
55	RFI	I	Playback EFM RF signal input.
56	AVSS		Analog power supply.
57	PDO	О	Not used.
58	PCO	О	Phase comparison output to the master PLL of playback digital PLL and to the
50	EH I	т	recording EFM PLL.
59	FILI	I	Filter input to the master PLL of playback digital PLL and to the recording EFM PLL.
60	FILO	О	Filter output to the master PLL of playback digital PLL and to the recording EFM PLL.
61	CLTV	I	Internal VCO control voltage of the master PLL of playback digital PLL and of the recording EFM PLL.
62	PEAK	I	Optical light volume's peak hold signal input.
63	ВОТМ	I	Optical light volume's bottom hold signal input.
64	ABCD	I	Optical light volume signal input.
65	FE	I	Focus error signal input.
66	AUX1	I	Auxiliary input 1.
67	VC	I	Center terminal voltage input.
68	ADIO	О	Not used.
69	AVDD	_	Analog power supply.
70	ADRT	I	Voltage input of the upper limit of the A/D converter operation range.
71	ADRB	I	Voltage input of the lower limit of the A/D converter operation range.
72	AVSS		Analog GND.
73	SE	I	Sled error signal input.
74	TE	I	Tracking error signal input.
75	AUX2	I	Auxiliary input 2.


Pin No.	Pin Name	I/O	Description
76	DCHG	I	Connected to the low impedance power supply.
77	APC	I	Error signal input to the laser digital APC.
78	ADFG	I	ADIP2 binary-converted FM signal (22.05±1 kHz) input.
79	F0CNT	О	Current source setting output terminal to CXA2523.
80	XLRF	О	Latch output for CXA2523 control. Latched at rise-up.
81	CKRF	О	Shift clock output for CXA2523 control.
82	DTRF	О	Data output for CXA2523 control.
83	APCREF	О	Reference PWM output to laser APC.
84	LDDR	О	Not used.
85	TRDR	О	Tracking servo drive PWM output. (-).
86	TFDR	О	Tracking servo drive PWM output. (+).
87	DVDD	_	Digital power supply.
88	FFDR	О	Focus servo drive PWM output. (+).
89	FRDR	О	Focus servo drive PWM output. (-).
90	FS4	О	Not used.
91	SRDR	О	Sled servo drive PWM output. (-).
92	SFDR	О	Sled servo drive PWM output. (+).
93	SPRD	О	Spindle servo drive PWM output. (PWM (-) or negative polarity).
94	SPFD	О	Spindle servo drive PWM output. (PWM (+) or PWM absolute value).
95	FGIN	I	FG input to spindle CAV servo.
96	TEST1	I	
97	TEST2	I	Test pin. Connected to GND.
98	TEST3	I	
99	DVSS		Digital GND.
100	EFMO	О	Low signal during playback. EFM (encode data) output: during recording.

IC, CXP81952M-552R

Pin No.	Pin Name	I/O	Description
1	MCAS	_	
2	MRAS	_	Not used.
3	BUP	_	
4	AMUTE	О	Audio mute signal output.
5	ESK	О	Serial clock output for EEPROM interface.
6	EDO	О	Serial data output for EEPROM interface.
7	EDI	I	Serial data input for EEPROM interface.
8	ECS	О	EEPROM chip select signal output.
9	NC	_	Not used.
10	RFLCT	I	Input from disc reflectance detection switch.
11	NC	_	Not used.
12	LS	I	Input signal from pickup inner circumference detect switch.
13	LDSW	I	Input signal from loading mechanism EJECT position detect switch.
14	PBSW		Not used.
15	RECSW	I	Input signal from loading mechanism REC position detect switch.
16	NC	_	
17	NC	_	Not used.
18	ACOFF	_	
19	SREQ	I	System control send request input signal for system control interface.
20	EXTDIN	О	External DIGITAL-IN permission output signal.
21	SLOW	О	Speed control signal output to loading mechanism.
22	LOAD	О	Movement direction control signal output-1 to loading mechanism.
23	EJECT	О	Movement direction control signal output-2 to loading mechanism.
24	MREQ	О	MD controller send request output signal for system control interface.
25	DRIVE	О	EFM driver ON/OFF output signal.
26	NC	_	
27	NC	_	
28	NC		
29	NC		
30	NC		
31	NC		Not used.
32	NC	_	
33	NC		
34	NC		
35	NC		
36	NC		
37	MP		Connected to VSS.
38	SRST	I	MD controller reset signal input.
39	DGND		Connected to VSS.
40	XTALO	О	External crystal connection terminal-1 for system clock oscillation.
41	XTALI	I	External crystal connection terminal-2 for system clock oscillation.

Pin No.	Pin Name	I/O	Description		
42	ARDY	I	READY input signal for system control interface.		
43	SIN	I	Serial data input for system control interface.		
44	SOUT	О	Serial data output for system control interface.		
45	ACLK	О	Serial clock output for system control interface.		
46	XLAT	О	Latch signal output for CXD2652 interface.		
47	XRST	О	CXD2652 reset signal output.		
48	XSTBY	О	CXA2523 standby signal output.		
49	NC	О	Not used.		
50	AVSS	_	Connected to VSS.		
51	AVREF	_			
52	AVDD	_			
53	NC	I			
54	NC	I	Connected to VDD.		
55	NC	I			
56	SLF	I			
57	SLR	I			
58	TEMP	I	Connected to VSS.		
59	MAGIC	I			
60	NC	I	Connected to VDD.		
61	TEST	I			
62	DISCPRO	I	Disc write protection switch input.		
63	MNT3	I	CXD2652 monitor signal input-1.		
64	MNT2	I	CXD2652 monitor signal input-2.		
65	MNT1	I	CXD2652 monitor signal input-3.		
66	MNT0	I	CXD2652 monitor signal input-4.		
67	SENS	I	CXD2652 SENS signal input.		
68	FLG	О	Monitoring signal of flag contained in SRDT of CXD2652 interface.		
69	NC	О			
70	NC	О			
71	P-CONT	О	Not used.		
72	RFSW	О	1101 used.		
73	NC	О			
74	NC	О			
75	DQSY	I	DIGITAL-IN SUB-Q sync input.		
76	XINT	I	CXD2652 status sync input.		
77	SRDT	I	Serial data input for CXD2652 interface.		
78	SWDT	О	Serial data output for CXD2652 interface.		
79	SCLK	О	Serial clock output for CXD2652 interface.		
80	SQSY	I	SUB-Q, ADIP sync input.		
81	NC		Not used.		
82	NC	_ Tite used.			

Pin No.	Pin Name	I/O	Description
83	NC	_	Not used.
84	TXI	I	Connected to VSS.
85	TXO	О	Open.
86	VSS	_	Connected to VSS.
87	VDD	_	Connected to VDD.
88	NC	_	Connected to VDD.
89	NC	_	Not used.
90	DRVMUTE	О	BA5970FP mute signal output.
91	NC	_	
92	NC	_	Not used.
93	NC	_	Not used.
94	NC	_	
95	RECP	О	Laser power select signal output.
96	TX	О	Record data output enable signal output.
97	MOD	0	High frequency superimpose circuit ON/OFF signal output.
98	OPMUTE	О	Laser mute signal output.
99	ARST	О	AK4512 reset signal output.
100	DENF	О	De-emphasis ON/OFF signal output.

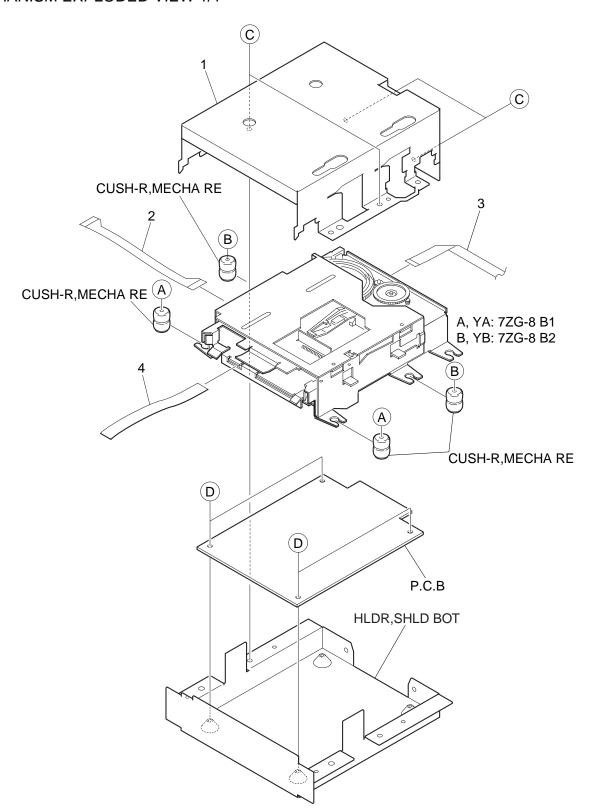


MECHANISM PARTS LIST 1/1

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。 If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	87-ZG9-202-210	HLDR,	SHLD TOP				
2	8A-ZG4-611-010	O PWB, F	LEX 21P AZG-4				
3	87-ZG9-604-010	O FF-CA	BLE, 5P 1.25 100MM				
4	87-ZG9-603-010	O FF-CA	BLE,8P 1.0 120MM				
A	87-ZG9-209-010	O S-SCR	EW,MD TF				
В	87-ZG9-208-010		EW,MD T				
C	87-067-020-010) SCREW	, VTT+3-4				
D	87-067-421-010	0 VTT+2	-4				

30

MECHANISM EXPLODED VIEW 1/1 (7ZG8)

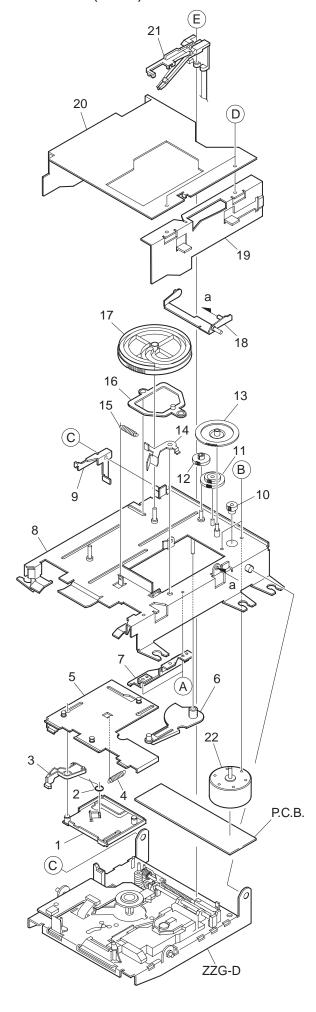


MECHANISM PARTS LIST 1/1 (7ZG8)

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。 If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PAR	T NO.	KANR NO.	I DESCRIPTION
1 2 3 4 5	87-ZG8-220-210 87-ZG8-259-110 87-ZG8-230-210 87-ZG8-224-110 87-ZG8-214-210	PLATE SPR-T LEVER SPR-E	ASSY,LATCH LATCH LATCH(*) LATCH ASSY,CARTRIGE	20 21 21 22 A	87-A90 87-A90 87-A90	3-209-31 0-605-21 1-539-01 0-672-01 0-129-01	0 0 0 0	PLATE ASSY,SLIDE L HEAD,OWH RF325-74A <b2> HEAD,OWH RM-21E<b1> MOT,M25E-4 VTT+1.7-3.5 W/O MFZN2-C</b1></b2>
6 7 8 9 10	87-ZG8-233-310 87-ZG8-255-210 87-ZG8-277-010 87-ZG8-256-110 87-ZG8-242-010	PLATE CHAS A LEVER		B C D E F	87-B10 87-B10 87-B10	0-128-01 0-130-01 0-185-01 0-286-01 7-315-01	0 0	V+1.7-2 W/O MFZN2-C W-P,1.23-3.1-0.25 SLIT VTT+2-3 VW+1.7-5 W/O MFZN2C PW 3.1-7-0.5
11 12 13 14 15	87-ZG8-253-01C 87-ZG8-246-01C 87-ZG8-252-01C 87-ZG8-231-11C 87-ZG8-232-11C	GEAR, I GEAR, I LEVER	REDUCTION S3 LDLER 2 REDUCTION L3 SHUTTER SHUTTER					
16 17 18 18 19	87-ZG8-225-310 87-ZG8-239-110 87-ZG8-257-210 87-ZG8-272-110 87-ZG8-213-310	CAM,LO LEVER LEVER	ASSY,CAM DAD(*) ASSY,REC <b2> ASSY REC2<b1> SLIDE R</b1></b2>					

MECHANISM EXPLODED VIEW 1/1 (ZZG-D)

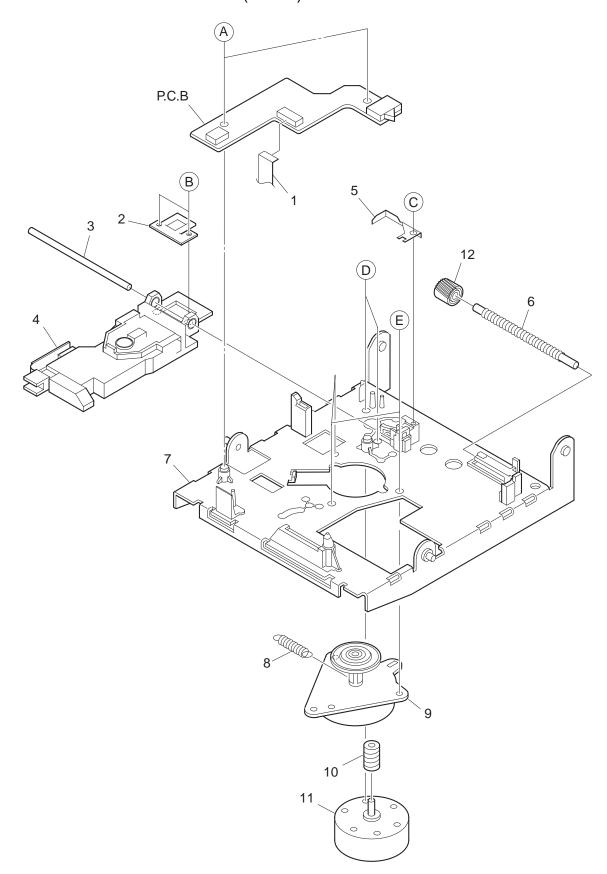

MECHANISM PARTS LIST 1/1 (ZZG-D)

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。 If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO		ANRI	DESCRIPTION	REF. NO	PART NO.	KANRI	DESCRIPTION
	ſ	NO.				NO.	
1	87-ZG9-603-010	FF-CABLE,	8P 1.0 120MM	11	87-A91-490-0	10 M	OT,BCD3B04
2	87-ZG3-216-010	SPR-P,RAC	'K	12	8Z-ZGD-206-0	10 GI	EAR, LEAD
3	87-ZG3-211-010	SHAFT, GUI	DE	A	87-341-035-2	10 S	CREW,UT1+2-6
4	87-A91-444-010	PICKUP,KM	IS-260B	В	87-067-393-0	10 S	CREW +1.4-1.4
5	8Z-ZGD-207-010	SPR-P, LEA	.D	C	8Z-ZGD-211-0	10 S	-SCREW,VBT+1.7-5
6	8Z-ZGD-208-010	SHAFT, LEA	.D	D	87-263-523-3	10 S	CREW, V+1.7-2
7	8Z-ZGD-201-010	CHAS ASSY	,MECHA	E	8Z-ZGD-210-0	10 S-	-SCREW,+2-2.5
8	8Z-ZGD-209-010	SPR-E, SPI	NDLE				
9	87-A91-489-010	MOT, BCD3E	193				
1.0	87-7GD-205-010	GEAR MOT					

REFERENCE NAME LIST ELECTRICAL SECTION

DESCRIPTION REFERENCE NAME ANT **ANTENNAS** CHIP C-CAP C-CAP TN CAP, CHIP CAP, CHIP TANTALUM C-COIL COIL, CHIP DIODE, CHIP DIODE, CHIP C-DI C-DIODE C-FET FET, CHIP C-FOTR C-JACK FILTER, CHIP JACK, ĆHIP LED, CHIP RES, CHIP C-LED C-RES SFR, CHIP SLIDE SWITCH, CHIP C-SFR C-SLIDE SW C-SW SWITCH, CHIP TRANSISTOR, CHIP C-VR VOLUME. CHIP C-ZENER ZENER, CHIP CAP, CER CAP, E CAP, CERA-SOL CAP, M/F CAP, TC CAP, TC-U CAP, TN CAP. FILM CAP, CERA-SOL CAP, CERA-SOL SS CAP, TANTALUM **CERA FIL** FILTER, CERAMIC CF DL E/CAP FILT FILTER, CERAMIC DELAY LINE CAP, ELECT FILTER FLTR **FUSE RES** RES, FUSE MOT P-DIODE P-SNSR P-TR MOTOR PHOTO DIODE PHOTO SENSER PHOTO TRANSISTOR **POLY VARI** VARIABLE CAPACITOR PPCAP POWER TRANSFORMER PTR, MELF PT PTR, RES RC REMOTE CONTROLLER **RES NF** RES, NON-FLAMMABLE RESO SHLD RESONATOR SHIELD SOL SPKR SOLENOID SPEAKER SW, LVR SWITCH, LEVER SW, RTRY SWITCH, ROTARY SW, SL TC CAP SWITCH, SLIDE CAP. CERA-SOL **THMS** THERMISTOR **TRANSISTOR** TRIMMER CAP, TRIMMER VARIABLE CAPACITOR VIB, CER RESONATOR, CERAMIC VIB, XTAL RESONATOR, CRYSTAL VOLUME ZENER DIODE, ZENER

MECHANICAL SECTION **DESCRIPTION** REFERENCE NAME ADHESHIVE SHEET ADHESHIVE AZIMUTH BAR-ANT BAR-ANTENNA BATTERY **BATT** BATTERY BRG **BEARING** BTN BUTTON CAB CABINET CASSETTE CHASSIS CHAS CLR COLLAR CONT CONTROL CRSR CURSOR CUSH CUSHION DIRECTION DUBB DUBBING FRONT LOADING FLY-WHL **FLYWHEEL** FUN G-CU FUNCTION G-CUSHION HANDOL HDI HIMERON CLOTH HINGE, BAT HINGE, BATTERY HLDR HT-SINK HOLDER HEAT SINK INSTRUCTION BOOKLET IDLE **IDLER** INDICATOR, L-R IND, L-R KEY, CONT KEY, PRGM KEY, CONTROL KEY, PROGRAM KNOB, SLIDE KNOB, SL LABEĹ LBL LID, BATT LID, BATTERY LID, CASS LID, CASSETTE LVR P-SP LEÝER P-SPRING PANEL, CONTROL PANEL, FRONT PANEL, CONT PANEL, FR PULLY, LOAD MO PULLY, LOAD MOTOR RBN RIBBON SPECIAL SEGMENT S-SEG SHEET SHLD-SH SHIELD-SHEET SL SP SPRING SPECIAL-SCREW SP-SCREW SPACER, BAT SPACER, BATTERY SPR SPR-P SPRING P-SPRING SPR-PC-PUSH T-SP P-SPRING, C-PUSH T-SPRING

TERMINAL

TRIGGER

WASHER

WHEEL WORM-WHEEL

TERM

TRIG TUN VOL W

WHL

WORM-WHL

アイワ株式会社 〒110-8710 東京都台東区池之端1-2-11 203 (3827) 3111 (代表) AIWA CO., LTD. 2-11, IKENOHATA 1-CHOME, TAITO-KU, TOKYO 110, JAPAN TEL:03 (3827) 3111

35 0251431 Printed in Singapore